




ADJUSTMENT AND CONNECTION OF THE HP SWITCH

Please remove the black end cap:

Connecting and setting of the HP switch illustrated below:

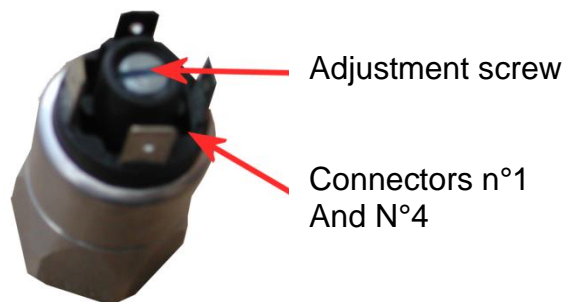

- Please tighten first the adjustment screw,
- put it one centimeter in the red zone,
- Unscrew until the water maker stops,
- Renew this operation 3 or 4 times (as the screw reacts very sensitively).